SENSOPART

Instruction manual

Ultrasonic Sensors with one analogue output

UMT 30-350-A-IUD-L5 UMT 30-1300-A-IUD-I 5 UMT 30-3400-A-IUD-L5 UMT 30-3400-AF-IUD-L5 UMT 30-6000-A-IUD-L5

Product description

- The UMT-sensor with one analogue output measures the distance to an object within the detection zone contactless. A signal proportional to distance is created according to the adjusted window margings of the analogue characteristic
- The sensor automatically detects the load put to the analogue output and switches to current output or voltage output re-
- All settings are done with two push-buttons and a three-digit 7 segment display.

- Light emitting diodes (three-colour LEDs) indicate all operation conditions.
- Choosing between rising and falling output characteristic is possible.
- The sensors are adjustable manually using the numerical 7 segment display or may be trained using Teach-in processes.
- Useful additional functions are set in the Add-on-menu

Important instructions for assembly and application

All employee and plant safety-relevant measures must be taken prior to assembly, start-up, or maintenance work (see operation manual for the entire plant and the operator instruction of the plant).

The sensors are not considered as safety equipment and may not be used to ensure human or machine safety!

The UMT-sensors indicate a blind zone, in which the distance cannot be measured. The operating range indicates the distance of the sensor that can be applied with normal reflectors with sufficient function reserve.

When using good reflectors, such as a calm water surface, the sensor can also be used up to its maximum range. Objects that strongly absorb (e.g. plastic foam) or diffusely reflect sound (e.g. pebble stones) can also reduce the defined operating range.


Synchronisation

If the assembly distances shown in Fig.1 for two or more sensors are exceeded the integrated synchronisation should be used. Connect Sync/Com-channels (pin 5 at the units receptable) of all sensors (10 maximum).

Multiplex mode

The Add-on-menu allows to assign an individual address »01« to »10« to each sensor connected via the Sync/Com-channel (Pin5). The sensors perform the ultrasonic measurement sequentially from low to high address. Therefore any influence between the sensors is rejected.


The address »00« is reserved to synchronisation mode and deactivates the multiplex mode. (To use synchronised mode all sensors must be set to address »00«.)

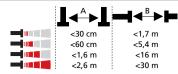

Assembly distances, indicating synchronisation/multiplex

Assembly instructions

- Assemble the sensor at the installation location
- Plug in the connector cable to the M 12 connector

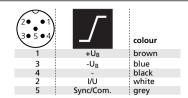

Pin assignment with view onto sensor plug and colour coding of the SensoPart connection cable

Start-up

UMT-sensors are delivered factory made with the following settings:

- Rising analogue characteristic
- Window margins for the analogue output set to blind zone and operating range
- Measurement range set to maximum range

Set the parameters of the sensor manually or use the Teach-in procedure to adjust the detect points.

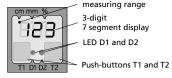


Fig. 3: Control panel

Operation

UMT-sensors work maintenance free. Small amounts of dirt on the surface do not influence function. Thick layers of dirt and cakedon dirt affect sensor function and therefore must be removed.


Note

- UMT-sensors have internal temperature compensation. Because the sensors heat up on their own, the temperature compensation reaches its optimum working point after approx. 30 minutes of opera-
- If an object is within the set window margins of the analogue output, then LED D1 lights up green, if the object is outside the window margins, then LED D1 lights
- The load put to the analogue output is detected automatically when turning supply voltage on.
- During normal mode operation, the measured distance value is displayed on the 7 segment indicator in mm (up to 999 mm) or cm (from 100 cm). Scale switches automatically and is indicated by a point on top of the digits. Alternatively a percentage scale may be set in the add-on menu. In this connection 0% and 100% correspond to the set window margins of the analogue output.
- If no objects are placed within the detection zone the 7 segment display shows »- - -«.
- If no push-buttons are pressed for 20 seconds during parameter setting mode the made changes are stored and the sensor returns to normal mode operation.


Show parameters


Tapping push-button T1 shortly during normal mode operation shows »PAr« on the 7 segment display. Each time you tap push-button T1 the actual settings of the analogue output are shown.

Set sensor parameters alternatively numerically using 7 segment display... Start here T1 + T2

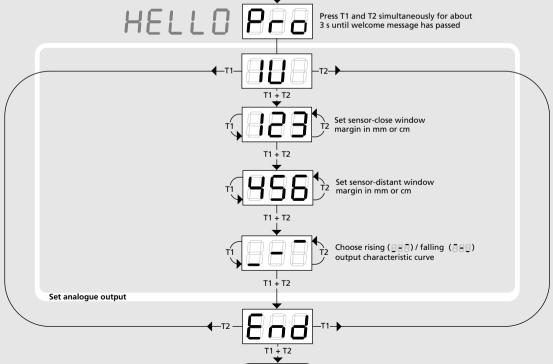

Readv

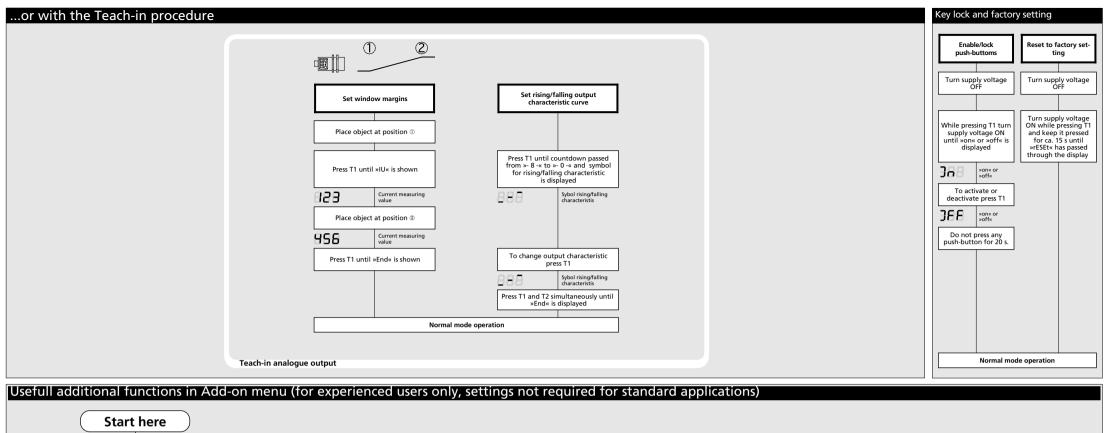

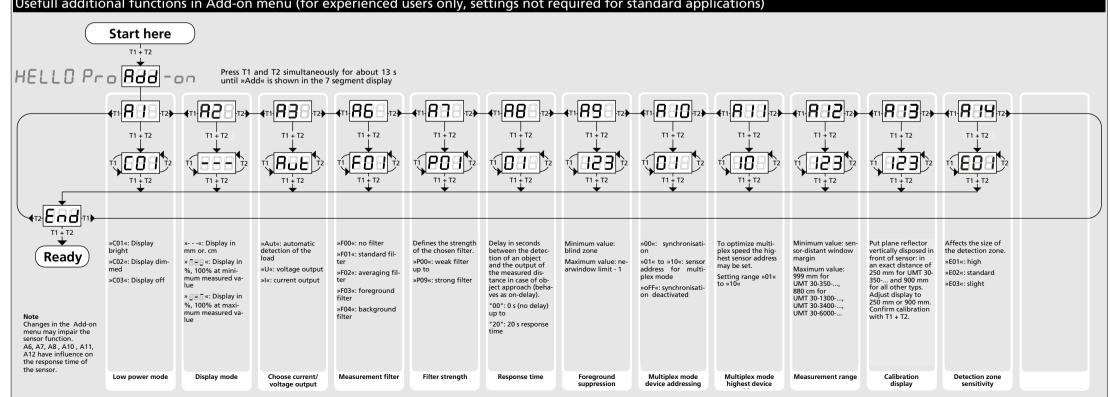

Technical data UMT 30-350-.. UMT 30-1300-... UMT 30-3400-... UMT 30-3400-... UMT 30-6000-36 width A/F 36 width A/F 36 width A/F 36 width A/F 36 width A/I 7 segment display 2 push-uttons 2 duo-LEDs 7 segment display 2 push-uttons 2 duo-LEDs 7 segment display 2 push-uttons 2 duo-LEDs 7 segment display 7 segment display M 30v1 5 M 30v1 5 2 push-uttons 2 duo-LEDs 2 push-uttons 2 duo-LEDs Analogue output Rlind zone 0 to 65 mm 0 to 200 mm 0 to 350 mm 0 to 350 mm 0 to 600 mm Operating range 1.300 mm 3.400 mm 3.400 mm 6.000 mm 350 mm Maximum range 600 mm 2.000 mm 5.000 mm 5.000 mm 8.000 mm Angle of heam spread Please see detection zone Transducer frequency 400 kHz 200 kHz 120 kHz 120 kHz 80 kHz Resolution, sampling rate 0 18 mm 0.18 mm 0.18 mm 0.18 mm 0.18 mm Reproducibility ± 0.15 % ± 0.15 % ± 0.15 % ± 0.15 % ± 0.15 % Accuracy Temperature drift internal compensated, ≤ 2 % may be deactivated1) (0,17%/K without compensation) may be deactivated1) (0,17%/K without compensation) may be deactivated¹⁾ (0,17%/K without compensation) may be deactivated1) (0,17%/K without compensation) may be deactivated1) (0,17%/K without compensation **Detection zones** for different objects: The dark grey areas are determind with a thin round bar (10 or 27 mm dia.) and indicate the typical operating range of a sensor. In order to obtain the light grey areas, a plate (500 x 500 mm) is introduced into the beam spread from the side. In doing so, the optimum angle between plate and sensor is always employed. 0.8 m 0 8 m Plate This therefore indicates the maximum detection Plate Plate / Plate zone of the sensor. It is not possible to evaluate ult-Plate rasonic reflections outside this area. 1.6 m Round bar Round har Round har Round bar 0,8 m Round has 2 4 m 30 cm 35 cm 1 2 m 3 2 m 3 2 m 1,3 m 40 cm 3.4 m 3 4 m 1 6 m 50 cm 4 8 m 4 8 m - 60 cm 5,6 m Opperating voltage U_B 9 V to 30 V DC, short-circuit-proof Voltage ripple ±10 % ±10 % ±10 % ±10 % ±10 % ≤ 80 mA ≤ 80 mA ≤ 80 mA No-load supply current < 80 mA Brass sleeve, nickel-plated, plastic parts; PBT, TPU; Brass sleeve, nickel-plated, plastic parts; PBT, TPU; Brass sleeve, nickel-plated, plastic parts; PBT, TPU; Stainless steel 1.4571, plastic parts; PBT, TPU; Brass sleeve, nickel-plated, plastic parts; PBT, TPU; Housing Ultrasonic transducer: polyurethane foam, epoxy resin with glass content Class of protection to EN 60529 IP 67 IP 67 IP 67 IP 67 IP 67 EN 60947-5-2 EN 60947-5-2 EN 60947-5-2 FN 60947-5-2 EN 60947-5-2 Norm conformity Type of connection 5-pin initiator plug, PBT 2 push-buttons (TouchControl) 2 push-buttons (TouchControl) 2 push-buttons (TouchControl) 2 push-buttons (TouchControl) Controls 2 push-buttons Indicators 3-digit 7 segment display, 2 three-colour LEDs 3-digit LED-display, 2 three-colour LEDs Yes, with TouchControl and LinkControl Programmable Yes, via control panel Operating temperature -25°C to +70°C -40°C to +85°C Storage temperature 210 g 210 g 150 g 150 g 270 g Weight Response time¹ 62 ms 92 ms 172 ms 172 ms 240 ms Time delay before availibility < 300 ms UMT 30-350-A-IUD-L5 UMT 30-1300-A-IUD-L5 UMT 30-3400-A-IUD-L5 UMT 30-3400-AE-IUD-L5 UMT 30-6000-A-IUD-L5 Order No. Current output 4 - 20 mA $R_1 \le 100 \Omega$ at $9 V \le U_R \le 20 V$; $R_I \le 100 \Omega$ at $9 V \le U_R \le 20 V$; $R_1 \le 100 \Omega$ at $9 V \le U_R \le 20 V$; $R_I \le 100 \Omega$ at $9 V \le U_R \le 20 V$; $R_i \le 100 \Omega$ at $9 V \le U_R \le 20 V$; $R_1 \le 500 \,\Omega$ at $U_0 \ge 20 \,V$ $R_{I} \le 500 \,\Omega$ at $U_{B} \ge 20 \,V$ $R_i \le 500 \,\Omega$ at $U_0 \ge 20 \,V$ $R_i \le 500 \Omega$ at $U_0 \ge 20 V$ $R_i \le 500 \Omega$ at $U_0 \ge 20 V$ Rising/falling output characteristic Voltage output 0 - 10 V $R_L \ge 100 \text{ k}\Omega$ at $U_B \ge 15 \text{ V}$, short-circuit-proof $R_L \ge 100 \text{ k}\Omega$ at $U_B \ge 15 \text{ V}$, short-circuit-proof $R_L \ge 100 \text{ k}\Omega$ at $U_B \ge 15 \text{ V}$, short-circuit-proof $R_L \ge 100 \text{ k}\Omega$ at $U_B \ge 15 \text{ V}$, short-circuit-proof $R_L \ge 100 \text{ k}\Omega$ at $U_B \ge 15 \text{ V}$, short-circuit-proof Rising/falling output characteristic 1) Can be programmed via control panel